

CULINARE®

Automatic Can Opener

User Instructions

 
Introduction

Congratulations on your purchase of The Advanced Automatic Can Opener (Model No:KC86). This incredible product will help you open almost all cans effortlessly. The Can Opener is simple to use. Place the unit on the can and press the button. The Can Opener will cut the can automatically. Once the lid comes free from the can, press the Button again to reset the Cutter to the start position.

Important safety instructions

- Read all instructions carefully before using your Can Opener.
- Close supervision is necessary when your Can Opener used near children.
- DO NOT open pressurised (aerosol-type) cans.
- DO NOT open cans of flammable liquids such as lighter fluids.
- DO NOT leave the Can Opener unattended.
- DO NOT press the Button when the Front Cap is removed.
- Make sure to press the Button to stop the unit right after the cutting is completed.
- During battery replacement, DO NOT press the Button to avoid turning the unit on.
- Before cleaning the Cutter, remove batteries to avoid accidentally turning the unit on.
- Avoid contact with the Cutter. Keep hands, hair, jewellery, clothing etc away from the Cutter during operation to prevent injury, and/or damage to the Can Opener.
- DO NOT immerse your Can Opener in water or any other liquids.
- NOT suitable for dishwasher.

Parts

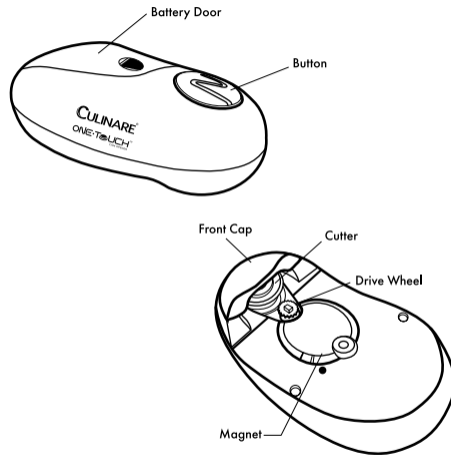

www.dkhouseholdbrands.com

www.culinare.com

DK HOUSEHOLD BRANDS LIMITED

Bridge House, Eelmoor Road, Farnborough, GU14 7UE, UK

DK HOUSEHOLD BRANDS CORP

3467 Apex Peakway, Apex, NC, 27502, USA

DK HOUSEHOLD BRANDS AG

Eggbühlstrasse 28, 8050 Zürich, Switzerland

DK HOUSEHOLD BRANDS AG GMBH

Bahnhofplatz 6, 56410 Montabaur, Germany

 
Getting started

Battery installation

1. Slide back the battery door to remove and install 2 AA alkaline or rechargeable batteries into the battery compartment according to the polarity (+/-) instruction.
2. Replace the battery door after the batteries have been installed.
3. Press the Button to reverse the Cutter whenever necessary.
4. Always replace all batteries at once and never mix old and new batteries or batteries of different types.
5. Take out the batteries if the Can Opener is stored for a long time.





CAUTION: The Cutter may be still operating when replacing the batteries.

Always keep your fingers away from the Cutter.

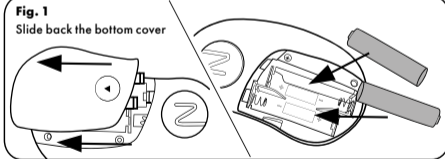

Operating the can opener

    1. Place your Can Opener on top of the can with its rim positioned in the groove between the Cutter and the Drive Wheel (Fig.2).
NOTE: To open the cans with tab, turn them upside down, so that the Can Opener can work on the lid without tab.
2. With the can on a flat surface, press the Button for about one second and release. The Can Opener will start cutting the can (Fig.3).
3. When the cutting has completed, press the Button immediately to reverse the Cutter (Fig.4).
4. Make sure the Cutter resets to the start position and the motor stops. Then, lift the Can Opener off the can. The Magnet on the Can Opener will pick up the lid as well for convenience (Fig.5)
NOTE: There is functional sharp edge on the round Cutter which should be treated with care

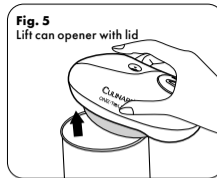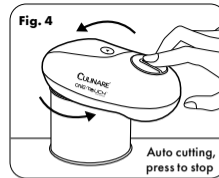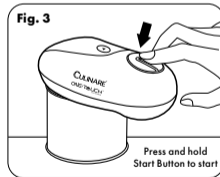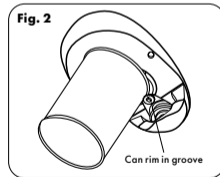


Care and maintenance

1. If the Can Opener slows during cutting, this may indicate low battery level and the batteries should be replaced. If the Can Opener stops during operation, see "Trouble Shooting" below.
2. To clean the Cutter, remove the batteries as a safety precaution and remove the Front Cap. Wipe the Cutter with a damp cloth or a sponge, using a mild non-abrasive cleaner, followed with a clean, dry cloth to dry it completely.

Trouble shooting

 1. If the Can Opener is jammed due to low battery level or a deformed can rim, press the Button again to activate the reverse function and the Cutter will reset to the start position (Fig.6).

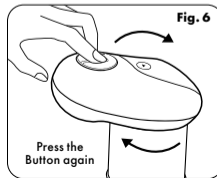

2. If batteries are depleted, the can may not be released by pressing the Button. Slide back the Battery Door and replace 2 AA batteries. The Can Opener should continue the cutting. Press the Button again to reset the Cutter to the start position after cutting is completed. Remember to replace the Battery Door after battery replacement.
3. Cans with heavy seams and uneven rims may stall the Can Opener. If this happens, follow above procedure to release the can. Start the cutting action just beyond any minor bump or dent in a can.
NOTE: The Can Opener will not open rimless cans or cans with odd corners.
4. Can's lid may get stuck at the Cutter after the unit stops. You may pull the lid backwards by your hands and the lid will come free from the Cutter.

Specifications

Dimension: 125 x 72 x 50 mm

Storage temperature: 10 to 40°C (50 to 104°F)

Battery: 2 x AA alkaline or rechargeable batteries